

NOTE: before operating any piece of equipment for the first time be sure to read the manufactures Operators Manual completely

# Basic Care & Maintenance

## ANIVAC ProHeat II

### Daily Cleaning\* & Maintenance

\*When finished using unit for the day the clean solution tank should be almost completely empty. Recommend initially practicing with plain water to get an idea of how much cleaning solution to start with.

### Step 1: Flush Pump & Solution Line

Fill empty Clean Solution tank with 1 gallon of plain water

Turn on PUMP switch only

Place vacuum head in empty catch basin

Pull trigger until most of water has sprayed into catch basin & spray starts to diminish **NOTE: NEVER RUN PUMP DRY**

Turn off PUMP switch

### Step 2: Flush Vacuum Hose Assembly

Turn on VACUUM switches only

Vacuum up solution in catch basin from previous step with air

#### **NOTE: DO NOT COMPLETELY SUBMERGE VACUUM HEAD**

(The goal is to create turbulence to dislodge any dirt, hair & debris that may accumulate inside the vacuum hose and pipe by suctioning 50:50 liquid/air)

Turn off VACUUM switches

### Step 3: Clean Floor Cleaning Tool Assembly & Vacuum Hose

Disconnect metal pipe & solution line from black plastic handle

Use clean rag soaked with disinfectant solution to clean the squeegee, brush, wheels, vacuum head & pipes removing any hair present (If needed use a flat head screwdriver 'pop' the wheels out to remove any hair caught around the axels then 'pop' back into place)

Using a gloved finger check inside vacuum head (at the joint) for any hair or debris accumulation

Store with squeegee/brush off floor to prevent damage

Disconnect vacuum hose & solution line from ANIVAC unit

Wipe exterior of hose/line with disinfectant soaked rag

Hang on designated hose rack



Chama Gomez  
Technical Field Specialist  
United States



855-900-8822 x 227



cgomez@ogenasolutions.com




Ogenasolutions.com



**OgenaSolutions**

Clean - Disinfect - Protect

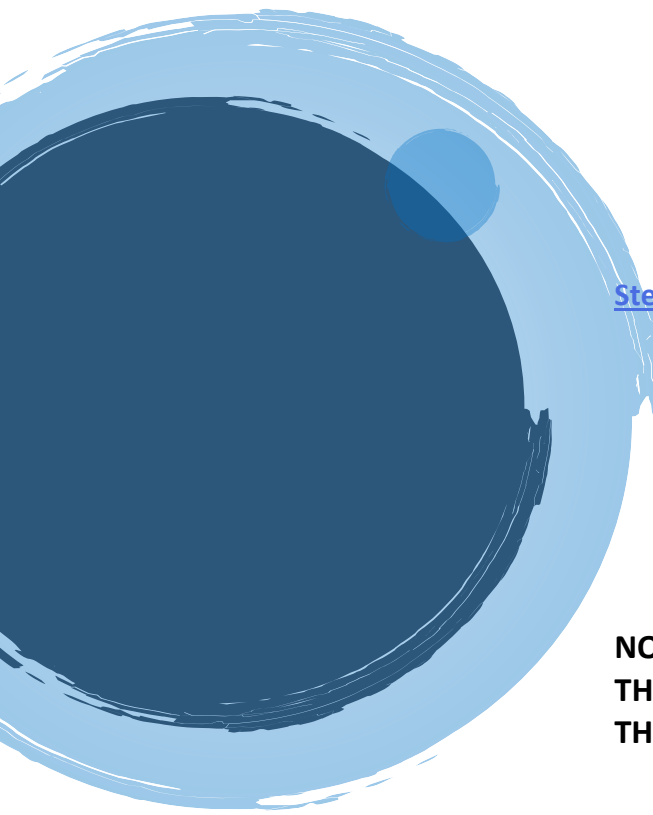

#### Step 4: Clean Main Unit

Disconnect extension cord(s) from electrical outlet(s) & wipe with rag as they are being wound up

Store on hanger in designated area

Wheel unit to location that has a drain & clean water hose

Pull discharge hose from clamp on front of machine, remove plug and gently lay down to the drain

Remove clear round lid from the Dirty Solution tank

Hose down interior of Dirty Solution tank until water runs clear

**NOTE: PAY CAREFUL ATTENTION TO RINSE THE EXTERIOR OF THE WIRE FLOAT CAGE LOCATED IN THE UPPER LEFT CORNER OF THE TANK**

Once the Dirty Solution Tank is empty push discharge hose back into clamp

Wipe down exterior of unit & threads of Dirty Solution tank lid

Store unit in designated area\*

**\*When storing unit, it is recommended to leave discharge hose unplugged & lid to the Dirty Solution tank off to allow interior of unit to dry out.**

#### Weekly Maintenance:

##### Step 1: Lubricate Quick Disconnect

**NOTE: ONLY USE A SILICONE SPRAY COMPATIBLE w/RUBBER**

Spray the entire inside of the female quick disconnect fitting being sure to coat the ball bearings & spin the collar

Spray the exterior of the male quick disconnect fitting while pressing in the middle pin

Repeatedly connect & disconnect the fittings together until male fitting 'pops out' easily when disconnected (usually 3-4 times is sufficient)

##### Step 2: Lubricate Trigger Valve

Spray Trigger Valve located in the 'V' between yellow plastic trigger & the bottom of the handle

Gently work trigger to disperse lubricant

##### Step 3: Clean & lubricate any connections where easy removal is desired (For example)

Threads to Dirty Solution tank lid

Solution line connectors

Floor tool metal pipe to vacuum handle

Floor tool metal pipe sections

Vacuum head to pipe

